


RSPB4

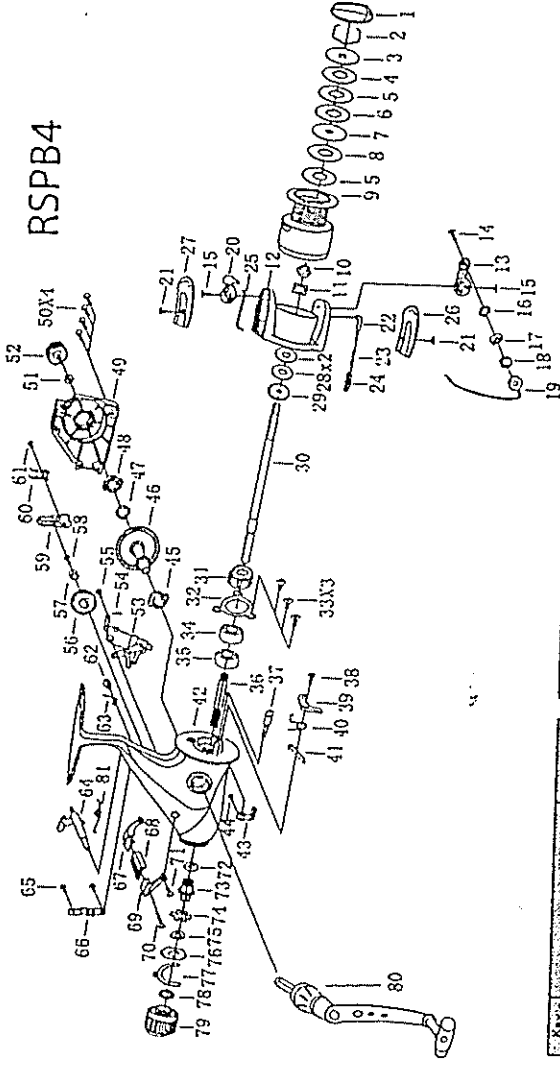

Key Number	Description	Part Number
1	Drag Knob Assembly	HRR032-01
2	Drag Retainer	HRR033-01
3	Drag Washer "D" Kevald to Reel	HRR034-01
4	Drag Friction Washer "B"	HRR035-01
5	Drag Washer Kevald to Spool	HRR036-01
6	Drag Friction Washer "B"	HRR037-01
7	Drag Washer "D" Kevald to Reel	HRR038-01
8	Drag Friction Washer "B"	HRR039-01
9	Spool Assembly	HRR040-01
10	Reel Nut	HRR041-01
11	Reel Washer	HRR042-01
12	Reel	HRR043-01
13	Reel Arm "A"	HRR044-01
14	Reel Axial Retainer Screw	HRR045-01
15	Reel Retainer Screw	HRR046-01
16	Reel Axial Washer	HRR047-01
17	Reel Retainer Bushing	HRR048-01
18	Low Reel	HRR049-01
19	Reel Assembly	HRR050-01
20	Reel Seal	HRR051-01
21	Screw	HRR052-01
22	Arm Lever Spring Shell	HRR053-01
23	Knob Lever Spring	HRR054-01
24	Arm Lever Spring Holder	HRR055-01
25	Ball Trip Lever	HRR056-01
26	Ball Latch Cover	HRR057-01
27	Knob Lever Cover	HRR058-01
28	Spool Washer	HRR059-01
29	Click Pawl (Spool)	HRR060-01
30	Center Shaft	HRR061-01
31	Clutch Assembly	HRR062-01
32	Bearing Retainer	HRR063-01
33	Bearing Screw	HRR064-01
34	Pinion Bearing	HRR065-01
35	Pinion	HRR066-01
36	Pinion	HRR067-01
37	Anti-Reverse Knob	HRR068-01
38	Screw	HRR069-01
39	Anti-Reverse Pawl	HRR070-01
40	Anti-Reverse Pawl Springs	HRR071-01
41	Anti-Reverse Pawl Retainer	HRR072-01
42	Main Body Assembly	HRR073-01
43	Anti-Reverse Lever	HRR074-01
44	Stop Lever Screw	HRR075-01
45	Crank Shaft Bushing	HRR076-01
46	Crank Gear	HRR077-01
47	Handle Screw Washer	HRR078-01
48	Crank Shaft Bushing	HRR079-01
49	Body Cover	HRR080-01
50	Blade Pin Screw	HRR081-01
51	Handle Screw Washer	HRR082-01
52	Handle Retainer Screw Cover	HRR083-01
53	Rear Clutch Assembly	HRR084-01
54	Anti-Reverse Clutch Spring	HRR085-01
55	Rear Clutch Retainer Screw	HRR086-01
56	Oxideless Gear	HRR087-01
57	OS Gear Bushing	HRR088-01
58	Oxideless Gear Retainer Screw	HRR089-01
59	Oxideless Sifter	HRR090-01
60	Oxideless Sifter Retainer	HRR091-01
61	Main Shaft Screw	HRR092-01
62	Side Clutch Pin Spring	HRR093-01
63	Side Clutch Pin	HRR094-01
64	Anti-Reverse Actuator	HRR095-01
65	Rear Clutch Retainer Screw	HRR096-01
66	Thumb Bar - Left Side	HRR097-01
67	Thumb Bar - Right Side	HRR098-01
68	Thumb Bar	HRR099-01
69	Thumb Retainer Screw - Body	HRR100-01
70	Drag Washer Kevald to Spool	HRR101-01
71	Drag Washer "B"	HRR102-01
72	Drag Clutch Gear	HRR103-01
73	Spool Gear	HRR104-01
74	Reel Drag Washer	HRR105-01
75	Drag Washer Kevald to Spool	HRR106-01
76	Drag Retainer	HRR107-01
77	Drag Spring	HRR108-01
78	Drag Knob Assy.	HRR109-01
79	Crack Handle Assembly	HRR110-01
80	Anti-Reverse Actuator Spring	HRR111-01
81	Anti-Reverse Actuator Spring	HRR112-01